

Moisture meter

User manual


Test block

Test medium to check the calibration accuracy for humimeter measuring devices with conductivity measuring method



78,0 °F | 6,16% | 456 kg/m³ | -27,3 °C | 0,64 aw | 51,9% r.H. | 14,8% abs | 100,4 g/m² | 09 m/s | 4,90 Ugl | 1

Overview of your test block

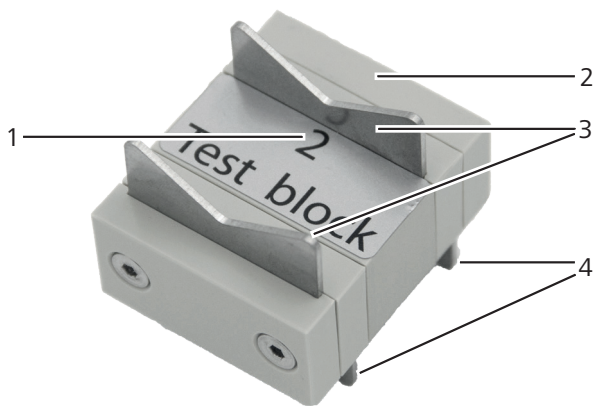


No	Name
1	Label (side 1, side 2)
2	Housing
3	Electrodes side 2
4	Electrodes side 1

1. Checking the calibration


1.1 Procedure for humimeter FL1, FL2, BLL, BLW, SLW & PMZ

Requirement: The device and the test block must have a temperature between 20,0 °C and 26,0 °C.


1. Turn on the device and select the "Test block" characteristic curve using the cursor keys.
2. Hold the test block with side 1 on the sensor. The correct positioning is shown in the images under the section: "[1.2.1 Positioning the test block](#)" Seite 5 .

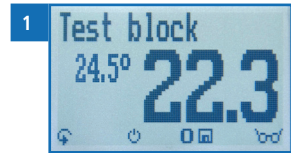

- » The two electrodes of the test block, lying on the sensor, should not be touched with the fingers.
- » The displayed water content must be **22,0 % (±1 %; -1%)**, (the humidity value is displayed in black) (image 1).
- » If the displayed value is beyond this range (the humidity value is displayed in grey) (image 2), please contact your dealer or Schaller Messtechnik GmbH.

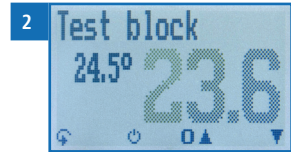




3. Hold side 2 of the test block on the lance.
 - » The displayed water content must be **41,0 % (+1 %; -1,5 %)** (the humidity value is displayed in black) (image 3).
 - » If the displayed value is beyond this range (the humidity value is displayed in grey), please contact your dealer or Schaller GmbH.

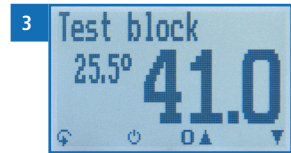

1.2 Procedure humimeter WLW


Requirement: The device and the test block must have a temperature between 20,0 °C and 26,0 °C.

4. Turn on the device and select the "Test block" characteristic curve using the cursor keys
5. Hold the test block with side 1 on the sensor. The correct positioning is shown in the images under the section: "[1.2.1 Positioning the test block](#)" [Seite 5](#) .
 - » The two electrodes of the test block, lying on the sensor, should not be touched with the fingers.
 - » The displayed water content must be **28,7 % (+/- 1,0 %)** (the humidity value is displayed in black) (image 4).
 - » If the displayed value is beyond this range (the humidity value is displayed in grey) (image 5), please contact your dealer or Schaller Messtechnik GmbH.
6. Hold side 2 of the test block on the lance.
 - » The displayed water content must be **70,0 % (+1,0 %; -1,5%)**, (the humidity value is displayed in black) (image 6).
 - » If the displayed value is beyond this range (the humidity value is displayed in grey), please contact your dealer or Schaller GmbH.

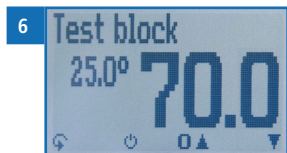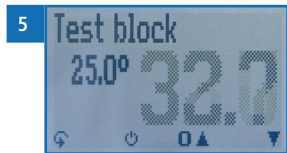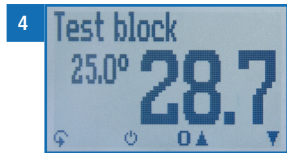


1.2.1 Positioning the test block

1.2.2 humimeter FL1 & FL2

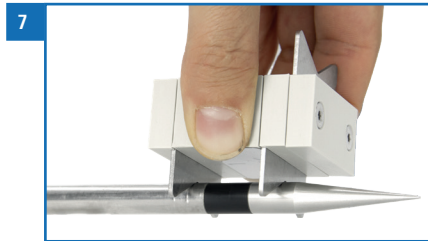


- » The two electrodes of the test block must lie firmly on the metal parts both before and behind the black plastic insulator.
- » The sensor tube or the measuring tip must be held in the air during the test.

1.2.3 humimeter BLL

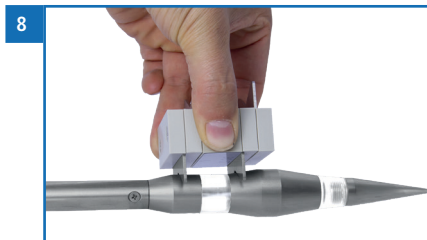


- » The two electrodes of the test block must lie firmly on the metal parts both before and behind the transparent plastic insulator.
- » The sensor tube or the measuring tip must be held in the air during the test.

1.2.4 humimeter WLW, BLW & SLW

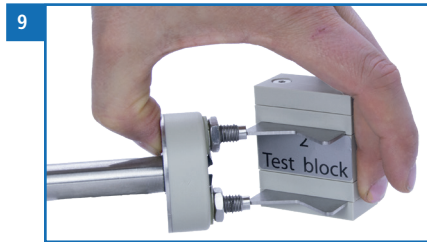

- » Remove the nails and nuts.
- » The two electrodes of the test block have to be held in the holes of the grub screws.
- » The electrodes must be pressed lightly onto the grub screws.
- » The measuring head must be held in the air during the test.

1.2.5 humimeter PMZ

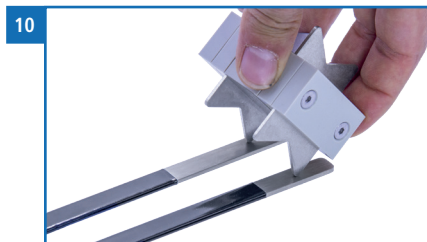

- » The two electrodes of the test block must be held on the bare metal brackets of the measuring head.
- » The measuring head must be held in the air during the test.

2. Care instructions

- Do not leave the test block out in the rain. The test block is not waterproof.
- Do not expose the test block to extreme temperatures.
- Protect the test block from strong mechanical shocks and loads.
- Store the test block in a climate between 30 and 70 % humidity.

2.1 Cleaning

Electrodes

- If the measuring head is dirty, it can be cleaned with alcohol.

Test block

- If the test block is dirty, clean it with a moistened cloth.





INFORMATION

Equipment damage caused by wet cleaning of electronics

Water or cleaning fluid getting inside the device can destroy the device.

- ▶ Only clean with dry materials.

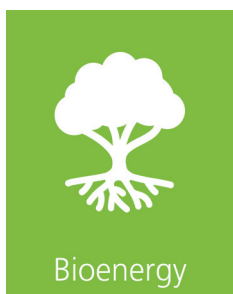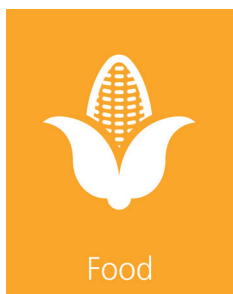

Schaller Messtechnik develops, produces and sells professional moisture meters and turnkey solutions.

Schaller Messtechnik GmbH

Max-Schaller-Straße 99, A - 8181 St. Ruprecht an der Raab

Tel +43 (0)3178 - 28899 , Fax +43 (0)3178 - 28899 - 901

info@humimeter.com, www.humimeter.com